Product Document





AS5601

12-Bit Programmable Contactless **Encoder**

General Description

The AS5601 is an easy-to-program magnetic rotary position sensor with incremental quadrature (A/B) and 12-bit digital outputs. Additionally, the PUSH output indicates fast airgap changes between the AS5601 and magnet which can be used to implement a contactless pushbutton function in which the knob can be pressed to move the magnet toward the AS5601.

This AS5601 is designed for contactless encoder applications, and its robust design rejects the influence of any homogenous external stray magnetic fields.

Based on planar Hall sensor technology, this device measures the orthogonal component of the flux density (Bz) from an external magnet.

The industry-standard I²C interface supports user programming of non-volatile parameters in the AS5601 without requiring a dedicated programmer.

The AS5601 also provides a smart low-power mode which automatically reduces power consumption

Ordering Information and Content Guide appear at end of datasheet.

Key Benefits & Features

The benefits and features of AS5601, 12-bit Programmable Contactless Encoder are listed below:

Figure 1: **Added Value of Using AS5601**

| Benefits | Features |
|--|---|
| Highest reliability and durability | Contactless angle measurement insensitive to dust and dirt |
| Simple programming | Simple user-programmable zero position and device configuration |
| Flexible choice of the number of A/B pulses per revolution | Quadrature output configurable from 8 up to 2048 positions |
| Contactless pushbutton functionality | Pushbutton output by detecting sudden airgap changes |
| Low power consumption | Automatic entry into low-power mode |
| Easy setup | Automatic magnet detection |
| Small form factor | SOIC-8 package |
| Robust environmental tolerance | Wide temperature range: -40°C to 125°C |



Applications


The AS5601 is ideally suited for:

- Encoder replacement
- Contactless rotary knobs with push buttons
- Other angular position measurement solutions

Block Diagram

The functional blocks of this device are shown below:

Figure 2: AS5601 Block Diagram

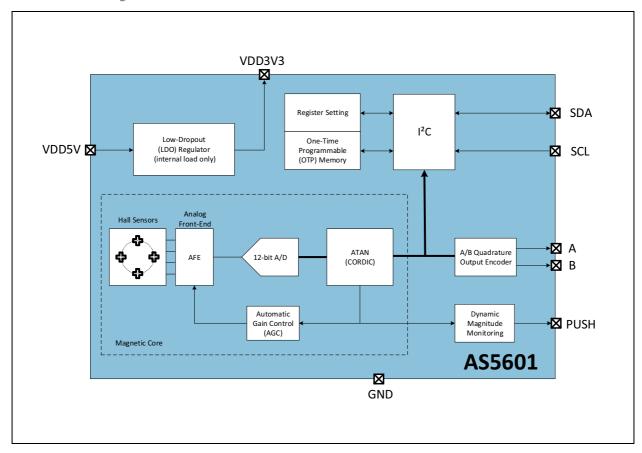


Page 2ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



Pin Assignments

Figure 3: SOIC-8 Pin-Out

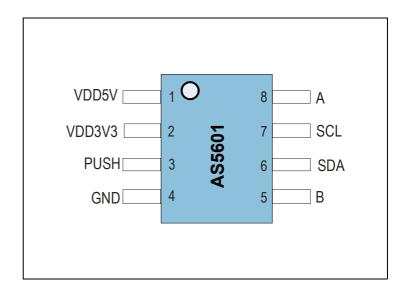

Pin Description

Figure 4: Pin Description

| Pin Number | Name | Туре | Description |
|------------|--------|----------------------|--|
| 1 | VDD5V | Supply | Positive voltage supply in 5V mode |
| 2 | VDD3V3 | Supply | Positive voltage supply in 3.3V mode (requires an external 1-μF decoupling capacitor in 5V mode) |
| 3 | PUSH | Digital output | Contactless pushbutton function output |
| 4 | GND | Supply | Ground |
| 5 | В | Digital output | Quadrature incremental signal B |
| 6 | SDA | Digital input/output | I ² C Data |
| 7 | SCL | Digital input | I ² C Clock |
| 8 | А | Digital output | Quadrature incremental signal A |

ams Datasheet Page 3
[v1-07] 2016-Sep-09 Document Feedback



Absolute Maximum Ratings

Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device. These are stress ratings only. Functional operation of the device at these or any other conditions beyond those indicated under Operating Conditions is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Figure 5: Absolute Maximum Ratings

| Symbol | Parameter | Min | Max | Units | Comments | | | | | | | |
|-------------------------|--|----------|---------------|-------------|--|--|--|--|--|--|--|--|
| , | | | cal Paramete | | | | | | | | | |
| | T | Liectiii | | | | | | | | | | |
| VDD5V | DC supply voltage at VDD5V pin | -0.3 | 6.1 | V | 5.0V operation mode | | | | | | | |
| VDD3V3 | DC supply voltage at VDD3V3 pin | -0.3 | 4.0 | V | 3.3V operation mode | | | | | | | |
| VAIO | Voltage at all digital or analog pins | -0.3 | VDD + 0.3 | V | | | | | | | | |
| I _{SCR} | Input current (latch-up immunity) | -100 | 100 | mA | JESD78 | | | | | | | |
| | Continuous Power Dissipation (T _A = 70°C) | | | | | | | | | | | |
| P _T | Continuous power dissipation | | 50 | mW | | | | | | | | |
| Electrostatic Discharge | | | | | | | | | | | | |
| ESD _{HBM} | Electrostatic discharge HBM (human body model) | | ±1 | kV | MIL 883 E method 3015.7 | | | | | | | |
| | Temperatu | re Rang | es and Storaç | ge Conditio | ns | | | | | | | |
| T _{STRG} | Storage temperature range | -55 | 125 | °C | | | | | | | | |
| T _{BODY} | Package body temperature | | 260 | °C | ICP/JEDEC J-STD-020 The reflow peak soldering temperature (body temperature) is specified according to IPC/JEDEC J-STD-020 "Moisture/Reflow Sensitivity Classification for Non-hermetic Solid State Surface Mount Devices." The lead finish for Pb-free leaded packages is "Matte Tin" (100% Sn) | | | | | | | |
| RH _{NC} | Relative humidity (non-condensing) | 5 | 85 | % | | | | | | | | |
| MSL | Moisture sensitivity level | | 3 | | ICP/JEDEC J-STD-033 | | | | | | | |

Page 4ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



Electrical Characteristics

All limits are guaranteed. The parameters with min and max values are guaranteed with production tests or SQC (Statistical Quality Control) methods.

Operating Conditions

Figure 6: **System Electrical Characteristics and Temperature Range**

| Symbol | Parameter | Conditions | Min | Тур | Max | Units |
|----------------|----------------------------|--|-----|-----|-----|-------|
| VDD5V | Positive supply voltage in | 5.0V operation mode | 4.5 | 5.0 | 5.5 | V |
| ۷۵۵۵۷ | 5.0V mode | During OTP burn procedure ⁽²⁾ | 4.3 | 3.0 | 3.3 | V |
| VDD3V3 | Positive supply voltage in | 3.3V operation mode | 3.0 | 3.3 | 3.6 | V |
| V003V3 | 3.3V mode | During OTP burn procedure ⁽²⁾ | 3.3 | 3.4 | 3.5 | ٧ |
| IDD | Supply current in NOM (1) | PM = 00 Always on | | | 6.5 | mA |
| IDD_LPM1 | Supply current in LPM1 (1) | PM = 01 Polling time = 5 ms | | | 3.4 | mA |
| IDD_LPM2 | Supply current in LPM2 (1) | PM = 10 Polling time = 20 ms | | | 1.8 | mA |
| IDD_LPM3 | Supply current in LPM3 (1) | PM = 11 Polling time = 100 ms | | | 1.5 | mA |
| IDD_BURN | Supply current per bit for | Initial peak, 1 µs | | | 100 | mA |
| 100_001(IV | burn procedure | Steady burning, <30 μs | | | 40 | mA |
| T _A | Operating temperature | | -40 | | 125 | °C |
| T _P | Programming temperature | | 20 | | 30 | °C |

Note(s):

- 1. For typical magnetic field (60 mT) excluding current delivered to the external load and tolerance on polling times.
- 2. For OTP burn procedure the supply line source resistance should not exceed 10hm.

ams Datasheet Page 5 **Document Feedback**



Digital Inputs and Outputs

Figure 7:
Digital Inputs and Outputs

| Symbol | Parameter | Conditions | Min | Тур | Max | Units |
|--------|---------------------------------------|------------|-----------|-----|-----------|-------|
| V_IH | High-level input voltage | | 0.7 × VDD | | | ٧ |
| V_IL | Low-level input voltage | | | | 0.3 × VDD | ٧ |
| V_OH | High-level output voltage | | VDD - 0.5 | | | V |
| V_OL | Low-level output voltage | | | | 0.4 | V |
| I_O | Output current for A, B, and PUSH | | -2 | | 2 | mA |
| C_L | Capacitive load for A, B, and PUSH | | | | 50 | pF |
| I_LKG | Leakage current | | | | ±1 | μΑ |

Timing Characteristics

Figure 8: Timing Conditions

| Symbol | Parameter | Conditions | Min | Тур | Max | Units |
|----------|----------------------------|------------|-----|-----|-------|---------|
| T_DETWD | Watchdog detection time | WD = 1 | 57 | 60 | 63 | seconds |
| T_PU | Power-up time | | | | 10 | ms |
| F_S | Sampling rate | | | | 150 | μs |
| T_SETTL1 | Settling time | SF = 00 | | | 2.2 | ms |
| T_SETTL2 | Settling time | SF = 01 | | | 1.1 | ms |
| T_SETTL3 | Settling time | SF = 10 | | | 0.55 | ms |
| T_SETTL4 | Settling time | SF = 11 | | | 0.286 | ms |

Page 6ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



Magnetic Characteristics

Figure 9: **Magnetic Characteristics**

| Symbol | Parameter | Conditions | Min | Тур | Max | Units |
|----------|---|--|-----|-----|-----|-------|
| Bz | Orthogonal magnetic field strength, regular output noise ON_SLOW and ON_FAST | Required orthogonal component of the magnetic field strength measured at the die's surface along a circle of 1 mm | 30 | 60 | 90 | mT |
| Bz_ERROR | Minimum required orthogonal magnetic field strength, magnet detection level | | | | 8 | mT |

System Characteristics

Figure 10: **System Characteristics**

| Symbol | Parameter | Conditions | Min | Тур | Max | Units |
|---------|---|--|-----|-----|-------|-----------|
| RES | Core Resolution | | | 12 | | bit |
| RES_AB | A/B output resolution | | 8 | | 2048 | positions |
| VMAX_AB | Maximum rotation speed for incremental output | Continuous Rotation ≥ 360deg ^{(1), (2)} | | | 456 | rpm |
| INL_BL | System INL | Deviation from best line fit; 360° maximum angle, no magnet displacement, no zero-programming performed | | | ±1 | degree |
| ON_SLOW | RMS output noise (1 sigma) | Orthogonal component for the magnetic field within the specified range Bz, after 2.2 ms; SF = 00 | | | 0.015 | degree |
| ON_FAST | RMS output noise (1 sigma) | Orthogonal component for the magnetic field within the specified range Bz, after 286 µs; SF = 11 | | | 0.043 | degree |

Note(s):

- 1. An infinite fast change <180deg results in angle output with maximum configured update frequency.
- $2. \ An infinite fast change >= 180 deg \ results \ in \ angle \ output \ to \ the \ shortest \ next \ absolute \ position \ with \ maximum \ configured \ update$ frequency. e.g. A change from 0 to 270deg will be indicated as angle output from 0 to -90deg.

ams Datasheet Page 7 **Document Feedback**



Detailed Description

The AS5601 is a Hall-based rotary magnetic position encoder that converts the magnetic field component perpendicular to the surface of the chip into voltages which are used to produce incremental A/B outputs and absolute position indication in registers that can be read over an industry-standard I²C bus.

The analog signals from the Hall sensors are first amplified and filtered before being converted by the analog-to-digital converter (ADC) into binary data. The output of the ADC is processed by the hardwired CORDIC block (Coordinate Rotation Digital Computer) to compute the angle and magnitude of the magnetic field vector. The intensity of the magnetic field is used by the automatic gain control (AGC) to adjust the amplification level to compensate for temperature and magnetic field variations.

The angle value provided by the CORDIC algorithm is used by the internal logic to generate the incremental quadrature signals A and B. The magnitude and AGC value is dynamically monitored and generates the PUSH output for fast changes of the airgap between the magnet and the AS5601. Very slow changes are suppressed to provide a robust and reliable pushbutton output that tolerates temperature variation and magnet degradation.

The AS5601 is programmed through an industry-standard I²C interface to write an on-chip one-time programmable (OTP) memory. This interface can be used to program a zero angle and to configure the chip.

Power Management


The AS5601 is powered from a 5.0V supply using the on-chip LDO regulator, or it can be powered directly from a 3.3V supply. The internal LDO is not intended to power other external ICs and needs a $1\mu F$ capacitor to ground, as shown in Figure 11.

In 3.3V operation, the VDD5V and VDD3V3 pins must be tied together. VDD is the voltage level present at the VDD5V pin.

Page 8
Document Feedback
[v1-07] 2016-Sep-09



Figure 11: 5.0V and 3.3V Power Supply Options

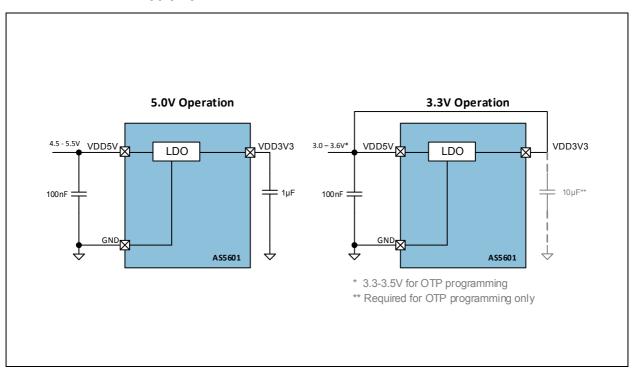

ams Datasheet Page 9
[v1-07] 2016-Sep-09 Document Feedback



I²C Interface

The AS5601 supports the 2-wire Fast-mode Plus I²C-slave protocol in device mode, in compliance with the NXP Semiconductors (formerly Philips Semiconductors) specification UM10204. A device that sends data onto the bus is a transmitter and a device receiving data is a receiver. The device that controls the message is called a master. The devices that are controlled by the master are called slaves. A master device generates the serial clock (SCL), controls the bus access, and generates the START and STOP conditions that control the bus. The AS5601 always operates as a slave on the I²C bus. Connections to the bus are made through the open-drain I/O lines SDA and the input SCL. Clock stretching is not included.

The host MCU (master) initiates data transfers. The 7-bit slave address of the AS5601 is 0x36 (0110110 in binary).


Supported Modes

- Random/Sequential read
- Byte/Page write
- Automatic increment (ANGLE register)
- Standard-mode
- Fast-mode
- Fast-mode Plus

The SDA signal is the bidirectional data line. The SCL signal is the clock generated by the I²C bus master to synchronize sampling data from SDA. The maximum SCL frequency is 1 MHz. Data is sampled on the rising edge of SCL.

I²C Interface Operation

Figure 12: I²C Electrical Specifications

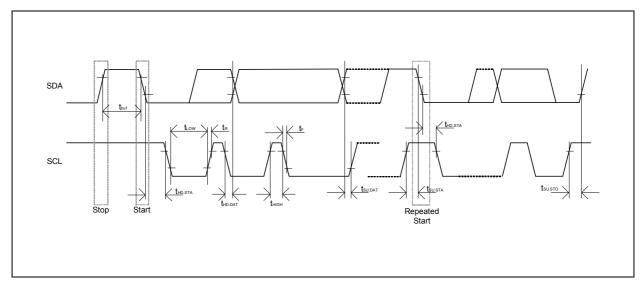

Page 10

Document Feedback

[v1-07] 2016-Sep-09



I²C Electrical Specification

Figure 13: I²C Electrical Specifications

| Symbol | Parameter | Conditions | Min | Max | Units |
|------------------|---|---|------------|-------------------|-------|
| VIL | Logic low input voltage | | -0.3 | 0.3 x VDD | V |
| VIH | Logic high input voltage | | 0.7 x VDD | VDD + 0.3 | V |
| VHYS | Hysteresis of Schmitt trigger inputs | VDD > 2.5V | 0.05 x VDD | | V |
| VOL | Logic low output voltage (open-drain or open-collector) at 3 mA sink current | VDD > 2.5V | | 0.4 | V |
| IOL | Logic low output current | VOL = 0.4V | 20 | | mA |
| t _{OF} | Output fall time from VIHmax to VILmax | | 10 | 120 (1) | ns |
| t _{SP} | Pulse width of spikes that must be suppressed by the input filter | | | 50 ⁽²⁾ | ns |
| I _I | Input current at each I/O Pin | Input voltage between 0.1 x VDD and 0.9 x VDD | -10 | +10 (3) | μА |
| C _B | Total capacitive load for each bus line | | | 550 | pF |
| C _{I/O} | I/O capacitance (SDA, SCL) ⁽⁴⁾ | | | 10 | pF |

Note(s):

- 1. In Fast-mode Plus, fall time is specified the same for both output stage and bus timing. If series resistors are used this has to be considered for bus timing.
- $2. \ \mbox{lnput filters}$ on the SDA and SCL inputs suppress noise spikes of less than 50 ns.
- 3. I/O pins of Fast-mode and Fast-mode Plus devices must not load or drive the SDA and SCL lines if VDD is switched OFF.
- 4. Special-purpose devices such as multiplexers and switches may exceed this capacitance because they connect multiple paths together.

ams Datasheet Page 11 **Document Feedback**



I²C Timing

Figure 14: I²C Timing

| Symbol | Parameter | Conditions | Min | Max | Units |
|---------------------|--|------------|------|--------------------|-------|
| f _{SCLK} | SCL clock frequency | | | 1.0 | MHz |
| t _{BUF} | Bus free time (time between the STOP and START conditions) | | 0.5 | | μs |
| t _{HD;STA} | Hold time; (Repeated) START condition (1) | | 0.26 | | μs |
| t _{LOW} | Low phase of SCL clock | | 0.5 | | μs |
| t _{HIGH} | High phase of SCL clock | | 0.26 | | μs |
| t _{SU;STA} | Setup time for a Repeated START condition | | 0.26 | | μs |
| t _{HD;DAT} | Data hold time ⁽²⁾ | | | 0.45 | μs |
| t _{SU;DAT} | Data setup time (3) | | 50 | | ns |
| t _R | Rise time of SDA and SCL signals | | | 120 | ns |
| t _F | Fall time of SDA and SCL signals | | 10 | 120 ⁽⁴⁾ | ns |
| t _{SU;STO} | Setup time for STOP condition | | 0.26 | | μs |

Note(s):

- 1. After this time, the first clock is generated.
- 2. A device must internally provide a minimum hold time of 120 ns (Fast-mode Plus) for the SDA signal (referred to the VIH_{min} of SCL) to bridge the undefined region of the falling edge of SCL.
- 3. A Fast-mode device can be used in a standard-mode system, but the requirement $t_{SU;DAT} = 250$ ns must be met. This is automatic if the device does not stretch the low phase of SCL. If such a device does stretch the low phase of SCL, it must drive the next data bit on SDA ($t_{Rmax} + t_{SU;DAT} = 1000 + 250 = 1250$ ns) before SCL is released.
- 4. In Fast-mode Plus, fall time is specified the same for both output stage and bus timing. If series resistors are used, this has to be considered for bus timing.

Page 12ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



I²C Modes

Invalid Addresses

There are two addresses used to access an AS5601 register. The first is the slave address used to select the AS5601. All I²C bus transactions include a slave address. The slave address of the AS5601 is 0x36 (0110110 in binary). The second address is a word address sent in the first byte transferred in a write transaction. The word address selects a register on the AS5601. The word address is loaded into the address pointer on the AS5601. During subsequent read transactions and subsequent bytes in the write transaction, the address pointer provides the address of the selected register. The address pointer is incremented after each byte is transferred, except for certain read transactions to special registers.

If the user sets the address pointer to an invalid word address, the address byte is not acknowledged (the A bit is high). Nevertheless, a read or write cycle is possible. The address pointer is increased after each byte.

Reading

When reading from an invalid address, the AS5601 returns all zeros in the data bytes. The address pointer is incremented after each byte. Sequential reads over the whole address range are possible including address overflow.

Automatic increment of the address pointer for ANGLE, RAW ANGLE, and MAGNITUDE registers:

These are special registers which suppress the automatic increment of the address pointer on reads, so a re-read of these registers requires no I²C write command to reload the address pointer. This special treatment of the pointer is effective only if the address pointer is set to the high byte of the register.

Writing

A write to an invalid address is not acknowledged by the AS5601, although the address pointer is incremented. When the address pointer points to a valid address again, a successful write accessed is acknowledged. Page write over the whole address range is possible including address overflow.

Supported Bus Protocol

Data transfer may be initiated only when the bus is not busy. During data transfer, the data line must remain stable whenever SCL is high. Changes in the data line while SCL is high are interpreted as START or STOP conditions.

ams Datasheet Page 13
[v1-07] 2016-Sep-09 Document Feedback



Accordingly, the following bus conditions have been defined:

Bus Not Busy

Both SDA and SCL remain high.

Start Data Transfer

A change in the state of SDA from high to low while SCL is high defines the START condition.

Stop Data Transfer

A change in the state of SDA from low to high while SCL is high defines the STOP condition.

Data Valid

The state of the data line represents valid data when, after a START condition, SDA is stable for the duration of the high phase of SCL. The data on SDA must only be changed during the low phase of SCL. There is one clock period per bit of data.

Each I²C bus transaction is initiated with a START condition and terminated with a STOP condition. The number of data bytes transferred between START and STOP conditions is not limited, and is determined by the I²C bus master. The information is transferred byte-wise and each receiver acknowledges with a ninth bit.

Acknowledge

Each I²C slave device, when addressed, is obliged to generate an acknowledge after the reception of each byte. The I²C bus master device must generate an extra clock period for this acknowledge bit.


A slave that acknowledges must pull down SDA during the acknowledge clock period in such a way that SDA is stable low during the high phase of the acknowledge clock period. Of course, setup and hold times must be taken into account. A master must signal an end of a read transaction by not generating an acknowledge bit on the last byte that has been clocked out of the slave. In this case, the slave must leave SDA high to enable the master to generate the STOP condition.

Page 14

Document Feedback [v1-07] 2016-Sep-09



Figure 15: **Data Read**

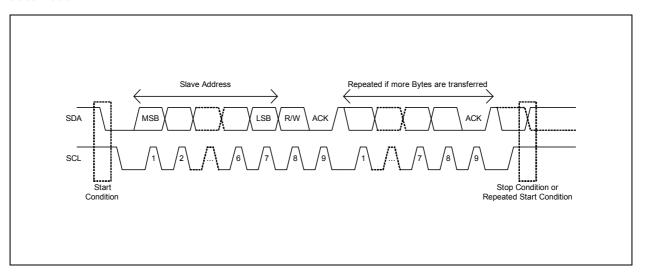

Depending on the state of the R/W bit, two types of data transfer are possible:

Data Transfer from a Master Transmitter to a Slave Receiver

The first byte transmitted by the master is the slave address, followed by R/W = 0. Next follows a number of data bytes. The slave returns an acknowledge bit after each received byte. If the slave does not understand the command or data it sends a not acknowledge (NACK). Data is transferred with the most significant bit (MSB) first.

Data Transfer from a Slave Transmitter to a Master Receiver

The master transmits the first byte (the slave address). The slave then returns an acknowledge bit, followed by the slave transmitting a number of data bytes. The master returns an acknowledge bit after all received bytes other than the last byte. At the end of the last received byte, a NACK is returned. The master generates all of the SCL clock periods and the START and STOP conditions. A transfer is ended with a STOP condition or with a repeated START condition. Because a repeated START condition is also the beginning of the next serial transfer, the bus is not released. Data is transferred with the most significant bit (MSB) first.

ams Datasheet Page 15 **Document Feedback**




AS5601 Slave Modes

Slave Receiver Mode (Write Mode)

Serial data and clock are received through SDA and SCL. Each byte is followed by an acknowledge bit or by a NACK depending on whether the address pointer selects a valid address. START and STOP conditions are recognized as the beginning and end of a bus transaction. The slave address byte is in the first byte received after the START condition. The 7-bit AS5601 address is 0x36 (0110110 in binary).

The 7-bit slave address is followed by the direction bit (R/W), which, for a write, is 0 (low). After receiving and decoding the slave address byte, the slave device drives an acknowledge on SDA. After the AS5601 acknowledges the slave address and write bit, the master transmits a register address (word address) to the AS5601. This is loaded into the address pointer on the AS5601. If the address is a valid readable address, the AS5601 answers by sending an acknowledge (A bit low). If the address pointer selects an invalid address, a NACK is sent (A bit high). The master may then transmit zero or more bytes of data. If the address pointer selects an invalid address, the received data are not stored. The address pointer will increment after each byte transferred whether or not the address is valid. If the address pointer reaches a valid position again, the AS5601 answers with an acknowledge and stores the data. The master generates a STOP condition to terminate the write transaction.

Figure 16:
Data Write (Slave Receiver Mode)

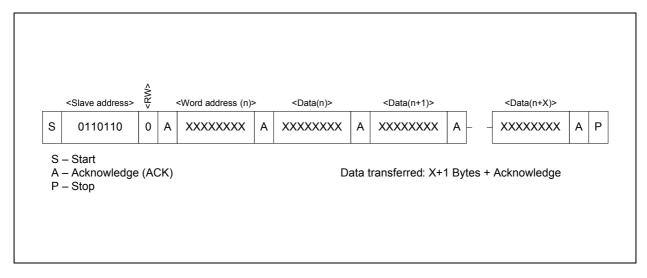


Page 16
Document Feedback
[v1-07] 2016-Sep-09



Slave Transmitter Mode (Read Mode)

The first byte is received and handled as in the slave receiver mode. However, in this mode, the direction bit indicates that the AS5601 will drive data on SDA. START and STOP conditions are recognized as the beginning and end of a bus transaction. The slave address byte is the first byte received after the master generates a START condition. The slave address byte contains the 7-bit AS5601 address. The 7-bit slave address is followed by the direction bit (R/W), which, for a read, is 1 (high). After receiving and decoding the slave address byte, the slave device drives an acknowledge on the SDA line. The AS5601 then begins to transmit data starting with the register address pointed to by the address pointer. If the address pointer is not written before the initiation of a read transaction, the first address that is read is the last one stored in the address pointer. The AS5601 must receive a not acknowledge (NACK) to end a read transaction.

Figure 17: **Data Read (Slave Transmitter Mode)**

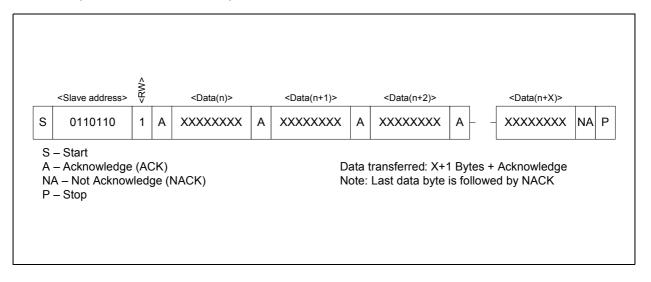

ams Datasheet Page 17 **Document Feedback**



Figure 18: Data Read with Address Pointer Reload (Slave Transmitter Mode)

| | <slave address=""></slave> | <rw></rw> | • | <word (n)="" address=""></word> | | | <slave address=""></slave> | <rw></rw> | | <data(n)></data(n)> | | <data(n+1)></data(n+1)> | | <data(n+x)></data(n+x)> | | |
|-------------|---|-----------|---|---------------------------------|---|----|----------------------------|-----------|---|-------------------------------------|---|-------------------------|---|-------------------------|----|---|
| s | 0110110 | 0 | Α | XXXXXXX | Α | Sr | 0110110 | 1 | Α | XXXXXXXX | А | xxxxxxx | А | XXXXXXXX | NA | Р |
| S A N | – Start r – Repeated St – Acknowledge A – Not Acknow – Stop | (AC | | NACK) | | | | | | red: X+1 Bytes ta byte is follow | | | | | | |

SDA and SCL Input Filters

Input filters for SDA and SCL inputs are included to suppress noise spikes of less than 50 ns.

Page 18ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



Register Description

The following registers are accessible over the serial I²C interface. The 7-bit device address of the AS5601 is 0x36 (0110110 in binary). To permanently program a configuration, a non-volatile memory (OTP) is provided.

Figure 19: **Register Map**

| Address | Name | R/W | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 | |
|------------------|------------|--------|----------------|----------|-----------|-----------|-----------|------------|------------|--------|--|
| | | | Configu | ation Re | gisters (| 1), (2) | | | | | |
| 0x00 | ZMCO | R | | | | | | | ZMC | O(1:0) | |
| 0x01 | ZPOS | R/W/P | | | | | | ZPOS | (11:8) | | |
| 0x02 | 2003 | K/W/P | | | | ZPO | S(7:0) | | | | |
| 0x07 | CONF | R/W/P | | | WD | | FTH(2:0) | | SF(1:0) | | |
| 0x08 | CONF | K/VV/P | | | | | HYST | Γ(1:0) | PM | (1:0) | |
| 0x09 | ABN | R/W/P | | | | | | ABN | (3:0) | | |
| 0x0A | PUSHTHR | R/W/P | | | | PUSHT | HR(7:0) | | | | |
| Output Registers | | | | | | | | | | | |
| 0x0C | RAW ANGLE | R | | | | | | RAW AN | GLE(11:8) | | |
| 0x0D | NAW ANGLE | R | | | | RAW AN | IGLE(7:0) | | | | |
| 0x0E | ANGLE | R | | | | | | ANGL | E(11:8) | | |
| 0x0F | ANGLE | R | | | | ANGI | _E(7:0) | | | | |
| | | | St | atus Reg | jisters | | | | | | |
| 0x0B | STATUS | R | | | MD | ML | МН | | | | |
| 0x1A | AGC | R | | | | AGC | (7:0) | | | | |
| 0x1B | MAGNITUDE | R | | | | | | MAGNITU | JDE (11:8 |) | |
| 0x1C | MAGINITUDE | R | MAGNITUDE(7:0) | | | | | | | | |
| | | | Ві | urn Com | mand | | | | | | |
| 0xFF | BURN | W | | Вι | ırn_Angle | e = 0x80; | Burn_Set | tting = 0x | 4 0 | | |

Note(s):

- 1. To change a configuration, read out the register, modify only the desired bits and write the new configuration. Blank fields may contain factory settings.
- 2. During power-up, configuration registers are reset to the permanently programmed value. Not programmed bits are zero.

ams Datasheet Page 19 **Document Feedback**



ZPOS Registers

These registers are used to configure the zero position (ZPOS). This register is used to align the electric grid of the incremental output with the mechanical grid of an encoder switch.

CONF Register

The CONF register supports customizing the AS5601. Figure 20 shows the mapping of the CONF register.

PUSHTHR Register

This register is used to set-up the contactless pushbutton function. This register must be adjusted according to the airgap and magnet configuration. The swing of the pushbutton function can be found by subtracting the AGC value of the pressed button from the AGC value of the released button. The threshold value for the contactless pushbutton should be half of the swing.

Figure 20: CONF and ABN Mapping

| Name | Bit Position | Description | | | | |
|-----------|--------------|---|--|--|--|--|
| | CONF Mapping | | | | | |
| PM(1:0) | 1:0 | Power Mode 00 = NOM, 01 = LPM1, 10 = LPM2, 11 = LPM3 | | | | |
| HYST(1:0) | 3:2 | Hysteresis 00 = OFF, 01 = 1 LSB, 10 = 2 LSBs, 11 = 3 LSBs | | | | |
| SF(1:0) | 9:8 | Slow Filter 00 = 16x ⁽¹⁾ ; 01 = 8x; 10 = 4x; 11 = 2x | | | | |
| FTH(2:0) | 12:10 | Fast Filter Threshold 000 = slow filter only, 001 = 6 LSBs, 010 = 7 LSBs, 011 = 9 LSBs,100 = 18 LSBs, 101 = 21 LSBs, 110 = 24 LSBs, 111 = 10 LSBs | | | | |
| WD | 13 | Watchdog Timer 0 = OFF, 1 = ON (automatic entry into LPM3 low-power mode enabled) | | | | |
| | | ABN Mapping | | | | |
| ABN(3:0) | 3:0 | Output Positions and Update Rate 0000:8 (61 Hz) 0001:16 (122 Hz) 0010:32 (244 Hz) 0011:64 (488 Hz) 0100:128 (976 Hz) 0101:256 (1.9 kHz) 0110:512 (3.9 kHz) 0111:1024 (7.8 kHz) others:2048 (15.6 kHz)) | | | | |

Note(s):

Page 20ams DatasheetDocument Feedback[v1-07] 2016-Sep-09

^{1.} Forced in Low Power Mode (LPM)



ANGLE/RAW ANGLE Register

The RAW ANGLE register contains the unscaled and unmodified angle. The scaled output value is available in the ANGLE register.

Note(s): The ANGLE register has a 10-LSB hysteresis at the limit of the 360 degree range to avoid discontinuity points or toggling of the output within one rotation.

STATUS Register

The STATUS register provides bits that indicate the current state of the AS5601.

Figure 21: **STATUS** Register

| Name | State When Bit Is High | |
|------|--|--|
| MH | AGC minimum gain overflow, magnet too strong | |
| ML | AGC maximum gain overflow, magnet too weak | |
| MD | Magnet was detected | |

AGC Register

The AS5601 uses automatic gain control (AGC) in a closed loop to compensate for variations of the magnetic field strength due to changes of temperature, airgap between IC and magnet, and magnet degradation. The AGC register indicates the gain. For the most robust performance, the gain value should be in the center of its range. The airgap of the physical system can be adjusted to achieve this value.

In 5V operation, the AGC range is 0-255 counts. The AGC range is reduced to 0-128 counts in 3.3V mode.

MAGNITUDE Register

The MAGNITUDE register indicates the magnitude value of the internal CORDIC output.

Non-Volatile Memory (OTP)

The non-volatile memory is used to permanently program the configuration. To program the non-volatile memory, the I²C interface is used. The programming can be either performed in the 5V supply mode or in the 3.3V operation mode but using a minimum supply voltage of 3.3V and a 10 µF capacitor at the VDD3V3 pin to ground. This 10 μF capacitor is needed only during the programming of the device. Two different commands are used to permanently program the device:

ams Datasheet Page 21 **Document Feedback**



Burn_Angle Command (ZPOS)

The host microcontroller can perform a permanent programming of ZPOS with a BURN_ANGLE command. To perform a BURN_ANGLE command, write the value 0x80 into register 0xFF. The BURN_ANGLE command can be executed up to 3 times. ZMCO shows how many times ZPOS have been permanently written.

This command may only be executed if the presence of the magnet is detected (MD = 1).

Burn_Setting Command (CONF)

The host microcontroller can perform a permanent writing of CONFIG with a BURN_SETTING command. To perform a BURN_SETTING command, write the value 0x40 into register 0xFF.

The BURN_SETTING command can be performed only one time.

Zero Position and Resolution Programming

A fundamental feature is to program the zero position (ZPOS) of the magnetic position encoder. This is required to adjust the A/B outputs to the mechanical pattern (grid) of a contactless encoder by setting the count transitions (transition of A and or B) between two adjacent mechanical positions. An example of a 3-bit contactless encoder is shown in Figure 22.

The electrical positions represent the positions where an A or B transition occurs. The zero position can be placed in correspondence of one of the electrical positions (yellow).

A BURN_ANGLE command can be executed up to 3 times to permanently program the zero position. It can only be executed if the presence of the magnet is detected (MD = 1).


Page 22

Document Feedback

[v1-07] 2016-Sep-09



Figure 22: Zero Position Setting of 3-Bit Encoder

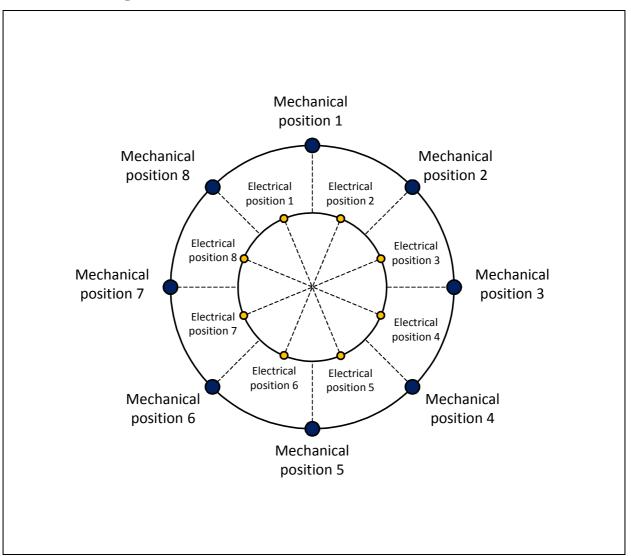

ams Datasheet Page 23
[v1-07] 2016-Sep-09 Document Feedback



The configuration procedure for a rotary encoder is shown below in Figure 23.

Figure 23: Zero Position and Resolution Programming Procedure

| Use the correct hardware configuration as shown in Figure 34 | | | | |
|--|---|--|--|--|
| Step 1 | Power up the AS5601. | | | |
| Step 2 | Configure the desired number of positions using ABN(3:0). | | | |
| Step 3 | The mechanical configuration snapped into the grid. Read out the actual RAW ANGLE. Calculate the compensation value to adjust the mechanical grid and the encoder angle. Refer to Figure 22 and Figure 24. Write the compensation value into ZPOS. Wait at least 1ms. | | | |
| Step 4 | Write the required setting into the configuration register CONF and PUSHTHR. Wait at least 1 ms. | | | |
| Proceed with Step | o 5 to permanently program the configuration. | | | |
| Step 5 | Perform a BURN_ANGLE command to permanently program the zero position. Wait at least 1 ms. | | | |
| Step 6 | Perform a Burn_Setting command to permanently program the configuration. Wait at least 1 ms. | | | |
| Step 7 | Verify the BURN commands: Write the commands 0x01, 0x11 and 0x10 sequentially into the register 0xFF to load the actual OTP content. Read and verify the permanently programmed registers to verify that the BURN_SETTINGS and BURN_ANGLE command was successful. | | | |
| Step 8 | Read and verify the permanently programmed registers again after a new power-up cycle. | | | |

Note(s):

- 1. After each register command, the new setting is effective at the output at least 1 ms later.
- 2. It is highly recommended to perform a functional test after this procedure.
- 3. At least 1 ms after each register command the new setting is effective at the output.
- 4. The BURN_ANGLE command can be executed up to 3 times and only if the presence of the magnet is detected (MD = 1).


Page 24ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



Quadrature Encoder Output

With the setting ABN(3:0) it is possible to configure the number of positions of the quadrature output. An example for a configuration with 8 positions is shown below.

Figure 24: Example Quadrature Output for 8 Positions

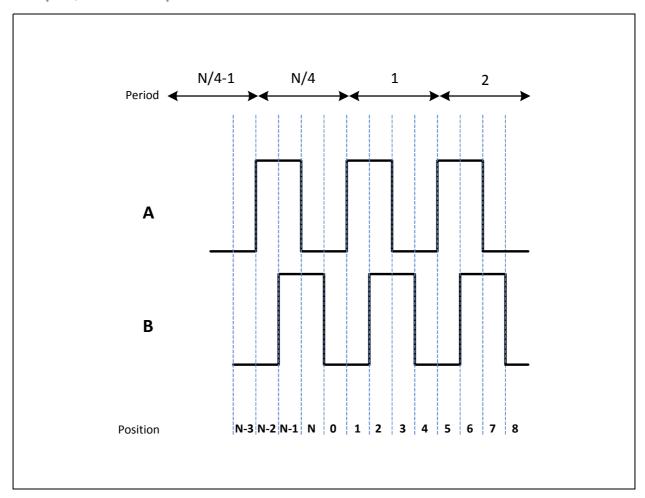


ams Datasheet Page 25
[v1-07] 2016-Sep-09 Document Feedback



Absolute Position Feature for Quadrature Output

The absolute angular position of the magnet is transmitted on the quadrature output of the position sensor after startup. By counting these pulses after startup, the absolute position within one turn of an encoder knob is known without separate initialization as shown in Figure 25.

Figure 25: Example Quadrature Output for Position 8dec After Startup

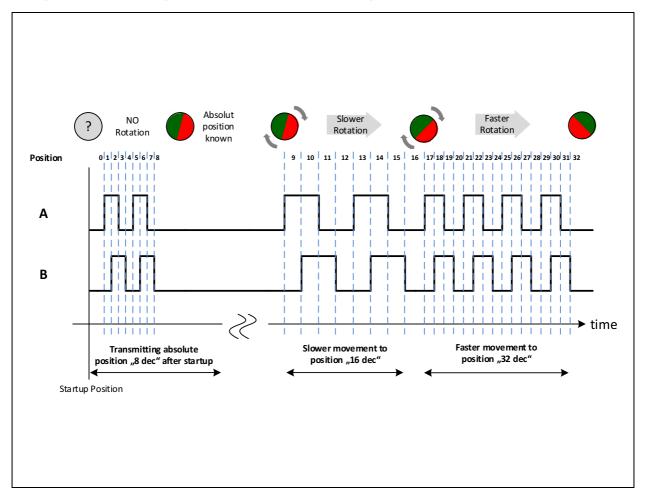

Page 26ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



Pushbutton Detection

The AS5601 implements a pushbutton detection function through a dynamic and relative measurement of the orthogonal magnetic field strength. This pushbutton detection function drives the PUSH output pin high when the AS5601 detects a fast increase of the magnetic field (decrease of the airgap between the magnet and the AS5601). After a fast decrease of the magnetic field, the PUSH output is driven low.


Figure 26: Pushbutton Detection Function Specifications

| Symbol | Parameter | Conditions | Min | Max | Unit |
|---------------------------|--|------------|-----|-------|------|
| PUSHTHR | Magnetic field threshold | | 0 | 255 | LSB |
| t _{pu_slope} | Push slope time | | | 500 | ms |
| | Push duration time NOM, LPM1 | PM = 0X | 10 | 10000 | ms |
| t _{pu_dur} | Push duration time LPM2 | PM = 10 | 40 | 10000 | ms |
| | Push duration time LPM3 | PM = 11 | 150 | 10000 | ms |
| | Time gap between two consecutive pushes in NOM, LPM1 | PM = 0X | 40 | | ms |
| t _{pu_relax} | Time gap between two consecutive pushes in LPM2 | PM = 10 | 40 | | ms |
| | Time gap between two consecutive pushes in LPM3 | PM = 11 | 150 | | ms |
| t _{pu_min_pulse} | Minimum duration of the PUSH pulse | | 40 | 50 | ms |
| t _{pu_recovery} | Recovery time after a very long pushbutton event | | | 5000 | ms |
| BTH_VAR | Push amplitude variation | -20 | | +20 | % |

ams Datasheet Page 27
[v1-07] 2016-Sep-09 Document Feedback



Figure 27: **Pushbutton Detection Function**

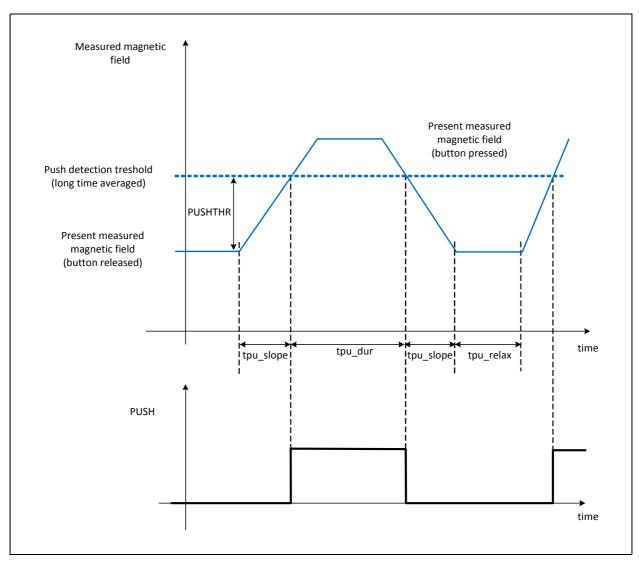


The AS5601 continuously measures the magnetic field intensity. The programmable threshold (PUSHTHR) is applied to a long time average of the magnetic field. A crossing of the current magnetic field and the threshold within a specified time (tpu_slope) drives the PUSH output high.

Slow changes of the magnetic field, due for example to temperature variations, magnet drift mechanical tolerances, etc. do not generate any pushbutton detection events. The push detection threshold follows the drifts over the time as shown in Figure 28.

Page 28 ams Datasheet [v1-07] 2016-Sep-09



Figure 28: Magnetic Field Threshold Over Time

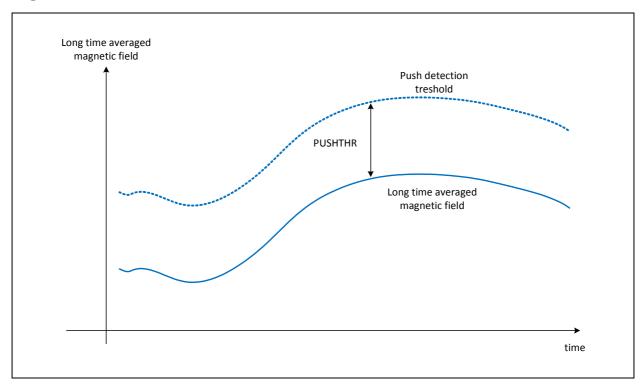

Step Response and Filter Settings

The AS5601 has a digital post-processing programmable filter which can be set in fast or slow modes. The fast filter mode can be enabled by setting a fast filter threshold in the FTH bits of the CONF register.

If the fast filter is OFF, the step output response is controlled by the slow linear filter as shown in Figure 30. The step response of the slow filter is programmable with the SF bits in the CONF register. Figure 29 shows the tradeoff between delay and noise for the different SF bit settings.


Figure 29: Step Response Delay vs. Noise Band

| SF | Step Response Delay (ms) | Max. RMS Output Noise (1 Sigma) (Degree) |
|----|-----------------------------|---|
| 00 | 2.2 | 0.015 |
| 01 | 1.1 | 0.021 |
| 10 | 0.55 | 0.030 |
| 11 | 0.286 | 0.043 |

ams Datasheet Page 29
[v1-07] 2016-Sep-09 Document Feedback



Figure 30: Step Response (fast filter OFF)

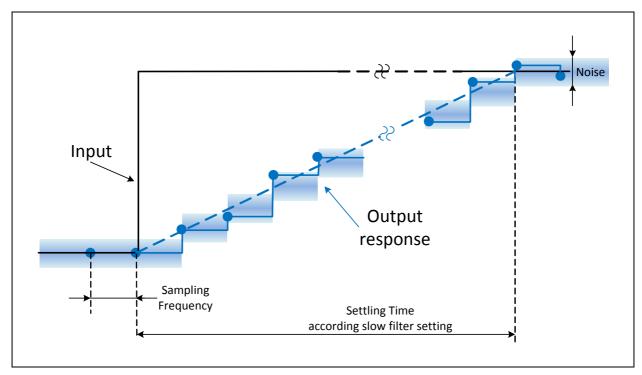

For a fast step response and low noise after settling, the fast filter can be enabled. The fast filter works only if the input variation is greater than the fast filter threshold, otherwise the output response is determined only by the slow filter. The fast filter threshold is programmed with the FTH bits in the CONF register. As shown in Figure 32, the fast filter (corresponds with SF=11) kicks in and takes care of a fast settling. The larger noise band of the fast filter is reduced again after the slow filter (depicted is setting SF=00) has taken over. The different noise bands are shown in Figure 29.


Figure 31: Fast Filter Threshold

| FTH | Fast Filter Threshold (LSB) | | | |
|-----|-----------------------------|---------------------|--|--|
| | Slow-to-Fast Filter | Fast-to-Slow Filter | | |
| 000 | Slow Fil | ter Only | | |
| 001 | 6 | 1 | | |
| 010 | 7 | 1 | | |
| 011 | 9 | 1 | | |
| 100 | 18 | 2 | | |
| 101 | 21 | 2 | | |
| 110 | 24 | 2 | | |
| 111 | 10 | 4 | | |

Page 30 Document Feedback



Figure 32: Step Response (fast filter ON)

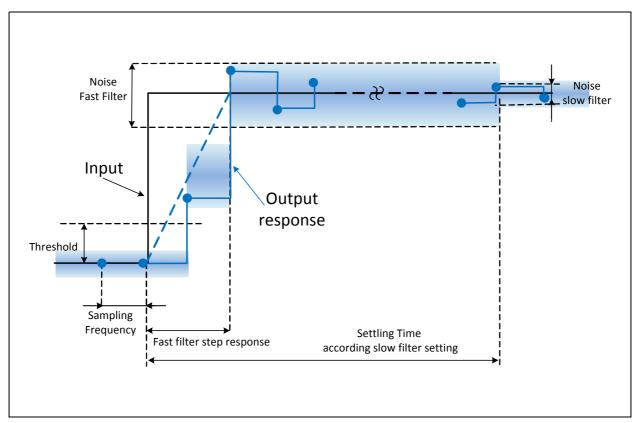

Hysteresis

To suppress spurious toggling of the output when the magnet is not moving, a 1 to 3 LSB hysteresis of the 12-bit resolution can be enabled with the HYST bits in the CONF register.

Magnet Detection

As a safety and diagnostic feature, the AS5601 indicates the absence of the magnet. If the measured magnet field strength goes below the minimum specified level (Bz_ERROR), quadrature output is not updated and the MD bit in the STATUS register is 0.

ams Datasheet Page 31
[v1-07] 2016-Sep-09 Document Feedback



Low Power Modes


A digital state machine automatically manages the low power modes to reduce the average current consumption. Three low-power modes are available and can be enabled with the PM bits in the CONF register.

In a low-power mode, the fast filter is automatically disabled, because there is no need for a fast settling time if the output refresh is as fast as the polling cycles.

Watchdog Timer

The watchdog timer allows saving power by switching into LMP3 if the angle stays within the watchdog threshold of 4 LSB for at least one minute, as shown in Figure 33. The watchdog function can be enabled by setting the WD bit in the CONF register.

Figure 33: Watchdog Timer Function

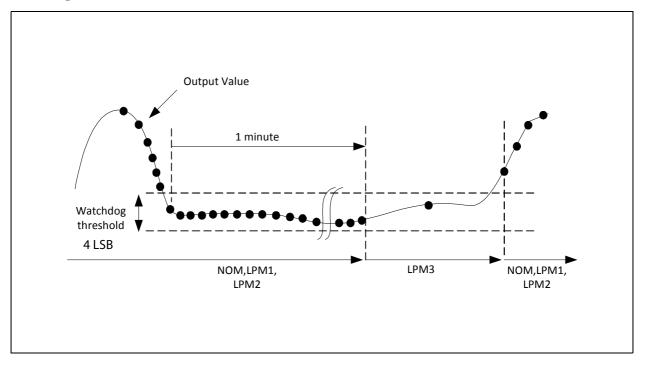

Page 32

Document Feedback

[v1-07] 2016-Sep-09



Application Information

Schematic

All required external components are shown below for the reference application diagram. To improve EMC and for remote applications, consider additional protection circuitry.

Figure 34: **Application Diagram for Angle Readout and Programming**

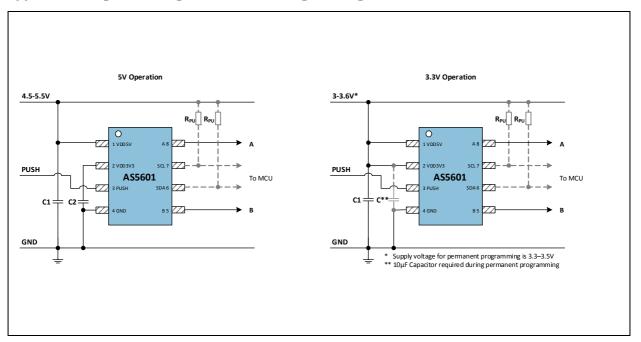


Figure 35: **Recommended External Components**

| Component | Symbol | Value | Units | Notes |
|---|--------|-------|-------|---|
| VDD5V buffer capacitor | C1 | 100 | nF | 20% |
| LDO regulator capacitor | C2 | 1 | μF | 20%; < 100 mΩ; Low ESR ceramic capacitor |
| Optional pull-up for I ² C bus | RPU | 4.7 | kΩ | refer to UM10204 for pull-up sizing |

Note(s):

1. Given parameter characteristics have to be fulfilled over operation temperature and product lifetime

ams Datasheet Page 33 **Document Feedback**




Magnet Requirements

The AS5601 requires a minimum magnetic field component Bz perpendicular to the sensitive area on the chip. The center of the sensitive area is in the center of the package.

Along the circumference of the Hall element circle the magnetic field Bz should be sine-shaped. The magnetic field gradient of Bz along the radius of the circle should be in the linear range of the magnet to eliminate displacement error by the differential measurement principle.

Figure 36: Magnetic Field Bz and Typical Airgap

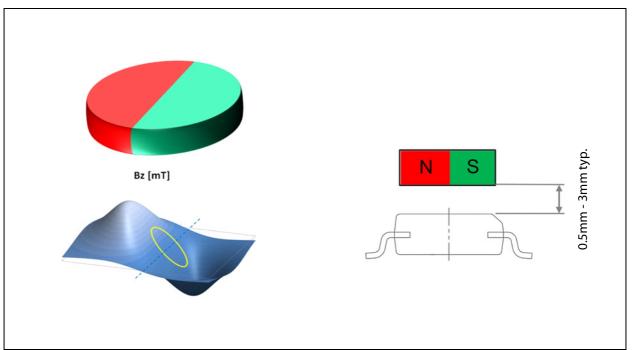

The typical airgap is between 0.5 mm and 3 mm, and it depends on the selected magnet. A larger and stronger magnet allows a larger airgap. Using the AGC value as a guide, the optimal airgap can be found by adjusting the distance between the magnet and the AS5601 so that the AGC value is in the center of its range. The maximum allowed displacement of the rotational axis of the reference magnet from the center of the package is 0.25 mm when using a magnet with a diameter of 6mm.

Page 34


Document Feedback [v1-07] 2016-Sep-09



Mechanical Data

The internal Hall elements are located in the center of the package on a circle with a radius of 1 mm.

Figure 37: **Hall Element Positions**

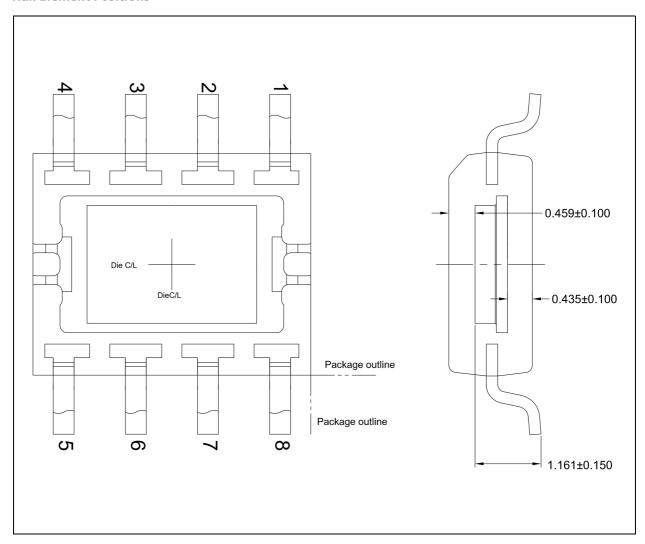

Note(s):


- 1. All dimensions in mm.
- 2. Die thickness 356µm nom.

ams Datasheet Page 35 Document Feedback



Package Drawings & Markings

Figure 38: SOIC8 Package Outline Drawing

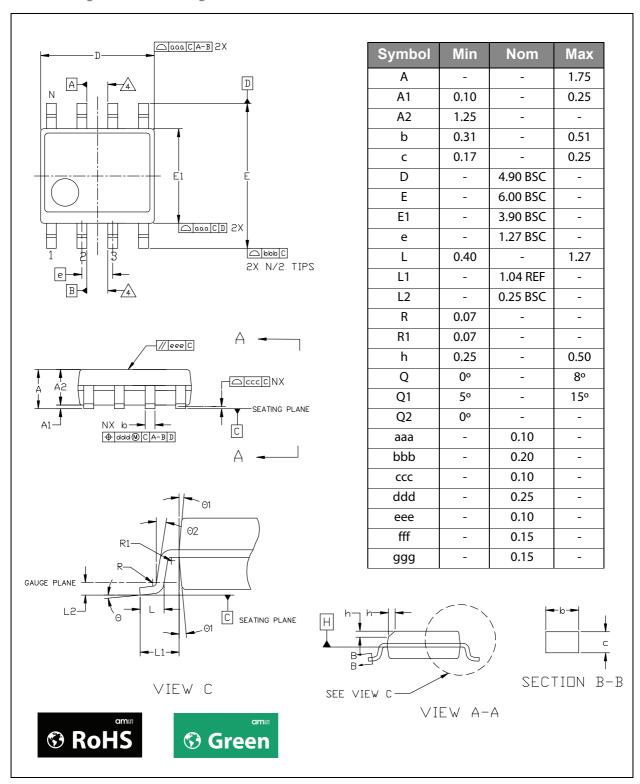

Note(s):

- 1. Dimensions & tolerancing confirm to ASME Y14.5M-1994.
- 2. All dimensions are in millimeters. Angles are in degrees.

Page 36ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



Figure 39: Package Marking

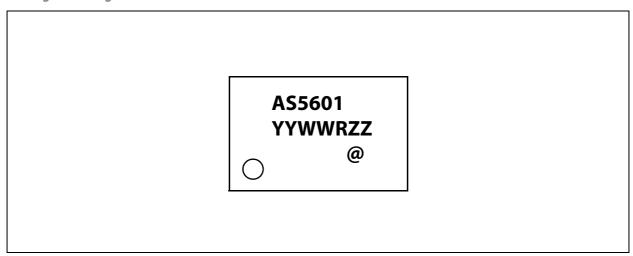


Figure 40: Packaging Code

| YY | WW | R | ZZ | @ |
|---|--------------------|------------------|-------------------------------|-------------------|
| Last two digits of the manufacturing year | Manufacturing week | Plant identifier | Free choice/traceability code | Sublot identifier |

ams Datasheet Page 37
[v1-07] 2016-Sep-09 Document Feedback



Ordering & Contact Information

Figure 41: Ordering Information

| Ordering Code | Package | Marking | Delivery Form | Delivery Quantity |
|---------------|---------|---------|-----------------------------|-------------------|
| AS5601-ASOT | SOIC-8 | AS5601 | 13" Tape & Reel in dry pack | 2500 pcs |
| AS5601-ASOM | SOIC-8 | AS5601 | 7" Tape & Reel in dry pack | 500 pcs |

Buy our products or get free samples online at:

www.ams.com/ICdirect

Technical Support is available at: www.ams.com/Technical-Support

Provide feedback about this document at:

www.ams.com/Document-Feedback

For further information and requests, e-mail us at:

ams_sales@ams.com

 $For \ sales \ of fices, \ distributors \ and \ representatives, \ please \ visit:$

www.ams.com/contact

Headquarters ams AG Tobelbader Strasse 30 8141 Premstaetten Austria, Europe

Tel: +43 (0) 3136 500 0 Website: www.ams.com

Page 38ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



RoHS Compliant & ams Green Statement

RoHS: The term RoHS compliant means that ams AG products fully comply with current RoHS directives. Our semiconductor products do not contain any chemicals for all 6 substance categories, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, RoHS compliant products are suitable for use in specified lead-free processes.

ams Green (RoHS compliant and no Sb/Br): ams Green defines that in addition to RoHS compliance, our products are free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material).

Important Information: The information provided in this statement represents ams AG knowledge and belief as of the date that it is provided. ams AG bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. ams AG has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. ams AG and ams AG suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

ams Datasheet Page 39
[v1-07] 2016-Sep-09 Document Feedback



Copyrights & Disclaimer

Copyright ams AG, Tobelbader Strasse 30, 8141 Premstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Devices sold by ams AG are covered by the warranty and patent indemnification provisions appearing in its General Terms of Trade. ams AG makes no warranty, express, statutory, implied, or by description regarding the information set forth herein. ams AG reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with ams AG for current information. This product is intended for use in commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by ams AG for each application. This product is provided by ams AG "AS IS" and any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed.

ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

Page 40

Document Feedback

[v1-07] 2016-Sep-09



Document Status

| Document Status | Product Status | Definition |
|--------------------------|-----------------|--|
| Product Preview | Pre-Development | Information in this datasheet is based on product ideas in the planning phase of development. All specifications are design goals without any warranty and are subject to change without notice |
| Preliminary Datasheet | Pre-Production | Information in this datasheet is based on products in the design, validation or qualification phase of development. The performance and parameters shown in this document are preliminary without any warranty and are subject to change without notice |
| Datasheet | Production | Information in this datasheet is based on products in ramp-up to full production or full production which conform to specifications in accordance with the terms of ams AG standard warranty as given in the General Terms of Trade |
| Datasheet (discontinued) | Discontinued | Information in this datasheet is based on products which conform to specifications in accordance with the terms of ams AG standard warranty as given in the General Terms of Trade, but these products have been superseded and should not be used for new designs |

Page 41 ams Datasheet [v1-07] 2016-Sep-09 **Document Feedback**



Revision Information

| Changes from 1-06 (2016-Apr-22) to current revision 1-07 (2016-Sep-09) | Page |
|--|------|
| Updated ANGLE/RAW ANGLE Register | 21 |

Note(s):

- 1. Page and figure numbers for the previous version may differ from page and figure numbers in the current revision.
- 2. Correction of typographical errors is not explicitly mentioned.

Page 42ams DatasheetDocument Feedback[v1-07] 2016-Sep-09



Content Guide

1 General Description

- 1 Key Benefits & Features
- 2 Applications
- 2 Block Diagram

3 Pin Assignments

3 Pin Description

4 Absolute Maximum Ratings

5 Electrical Characteristics

- 5 Operating Conditions
- 6 Digital Inputs and Outputs
- 6 Timing Characteristics
- 7 Magnetic Characteristics
- 7 System Characteristics

8 Detailed Description

- 8 Power Management
- 10 I²C Interface
- 10 I²C Interface Operation
- 11 I²C Electrical Specification
- 12 I²C Timing
- 13 I²C Modes
- 13 Invalid Addresses
- 13 Reading
- 13 Writing
- 13 Supported Bus Protocol
- 14 Bus Not Busy
- 14 Start Data Transfer
- 14 Stop Data Transfer
- 14 Data Valid
- 14 Acknowledge

16 AS5601 Slave Modes

- 16 Slave Receiver Mode (Write Mode)
- 17 Slave Transmitter Mode (Read Mode)
- 18 SDA and SCL Input Filters

19 Register Description

- 20 ZPOS Registers
- 20 CONF Register
- 20 PUSHTHR Register
- 21 ANGLE/RAW ANGLE Register
- 21 STATUS Register
- 21 AGC Register
- 21 MAGNITUDE Register
- 21 Non-Volatile Memory (OTP)
- 22 Burn_Angle Command (ZPOS)
- 22 Burn_Setting Command (CONF)
- 22 Zero Position and Resolution Programming
- 25 Quadrature Encoder Output
- 26 Absolute Position Feature for Quadrature Output
- 27 Pushbutton Detection
- 29 Step Response and Filter Settings

ams Datasheet Page 43
[v1-07] 2016-Sep-09 Document Feedback



- 31 Hysteresis
- 31 Magnet Detection
- 32 Low Power Modes
- 32 Watchdog Timer
- 33 Application Information
- 33 Schematic
- 34 Magnet Requirements
- 35 Mechanical Data
- 36 Package Drawings & Markings
- 38 Ordering & Contact Information
- 39 RoHS Compliant & ams Green Statement
- 40 Copyrights & Disclaimer
- 41 Document Status
- 42 Revision Information

Page 44ams DatasheetDocument Feedback[v1-07] 2016-Sep-09